

Removing and installing interior mirror




Note

The description refers to the maximum equipment level. Removal and installation of the interior mirror is identical for the basic version.

Removing

- Switch off ignition.
- Pull off cover cap -1- on both sides, push inwards slightly near the catches and carefully pull off retaining plate -2-.
- Turn the interior mirror 20° anti-clockwise and take off the retaining plate.
- Separate connection.

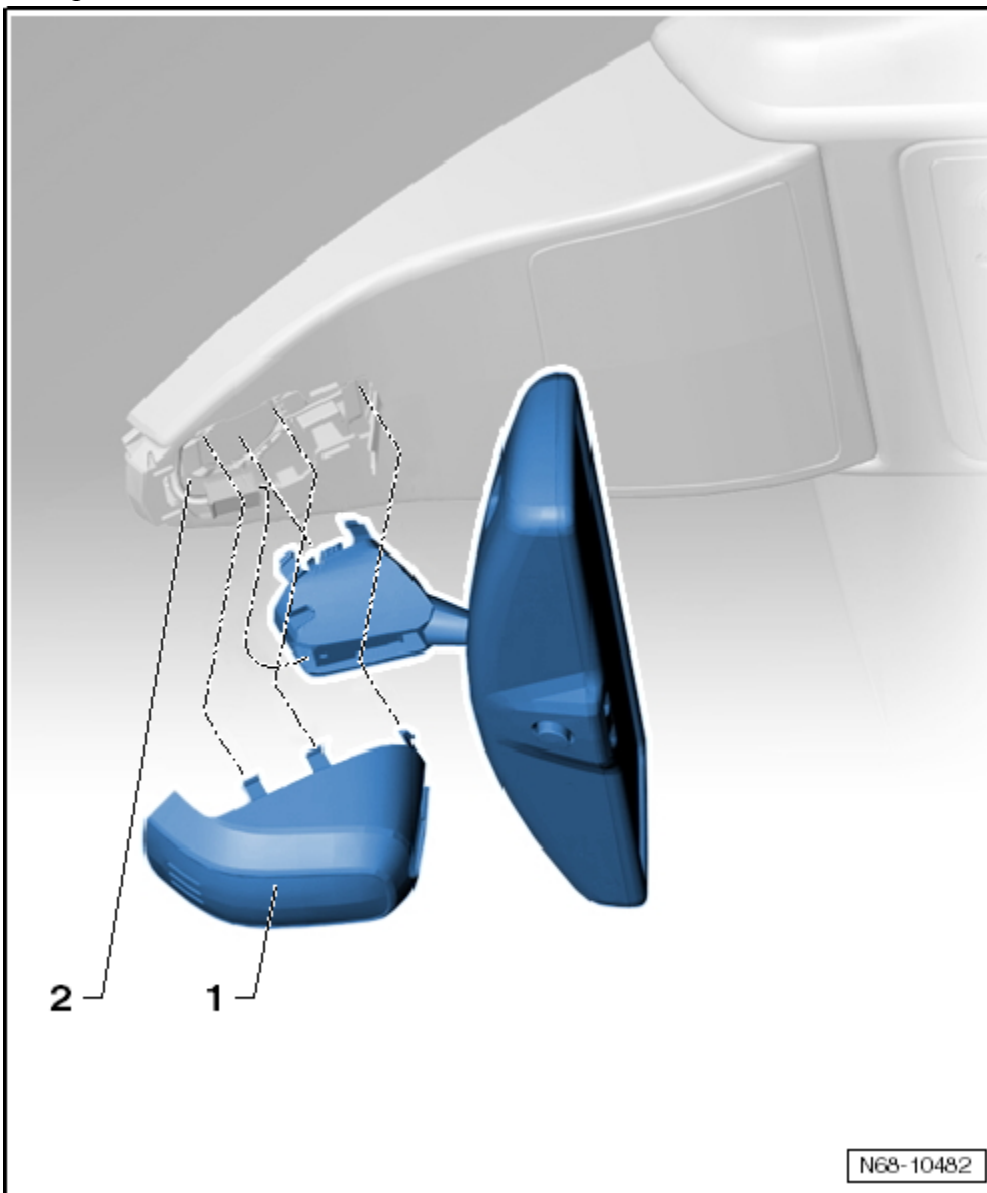

Installing

- Connect connector.
- Offer up the interior mirror on the retaining plate -2- turned 20° anti-clockwise.

- Lock the interior mirror onto the retaining plate by turning it clockwise.
- Fit the cover cap -1-.

