


Removing and installing camera cover

Removing

- Switch off ignition.
- Remove interior rear view mirror → [Chapter](#).
- Unclip the camera cover -1- at the front out of the retaining plate for the interior mirror -2- and swing downwards.
- Unhook the camera cover out of the moulded headliner.

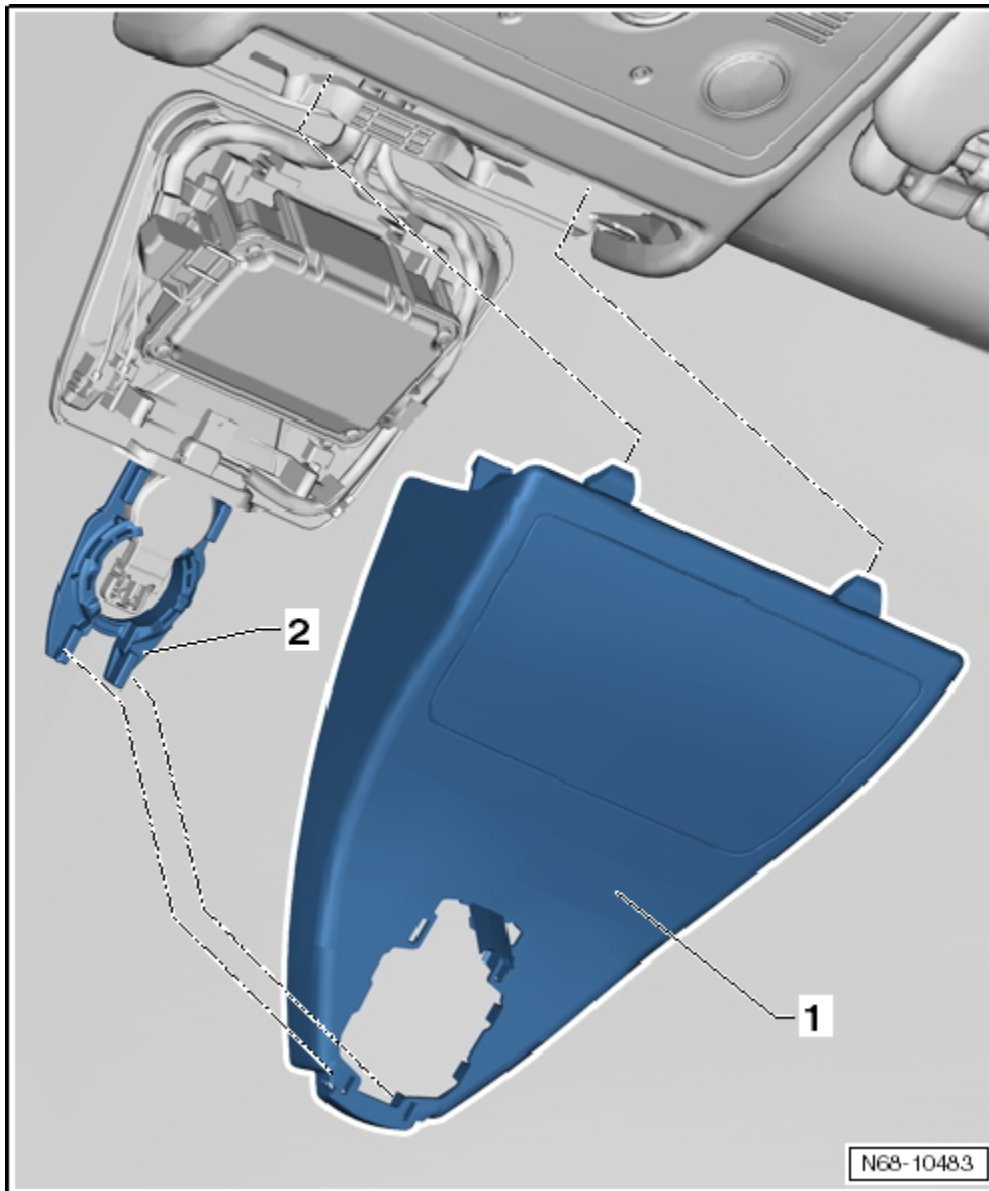

Installing

- Install in reverse order of removal.