

## Removing and installing front camera for driver assist systems


Special tools and workshop equipment required

t Front-end hook -3370-



Note


If control unit is to be renewed, select the “Replace control unit” function for appropriate control unit in → [Vehicle diagnostic tester](#).

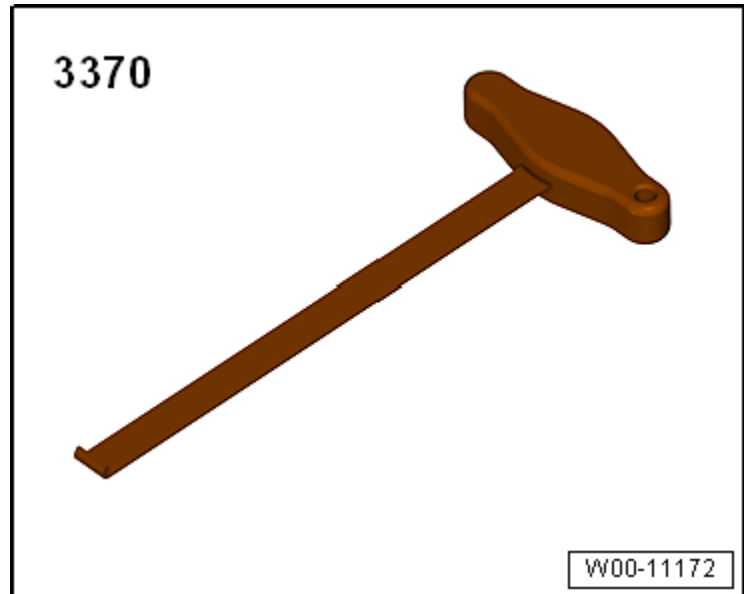

## Removing

Using front-end hook -3370--2-, release trim cover -1- for camera control unit - J852- from retaining plate in direction of -arrow A- (alternating between right and left sides), and detach downwards in direction of -arrow B-.

– If necessary, move clear electrical wiring.

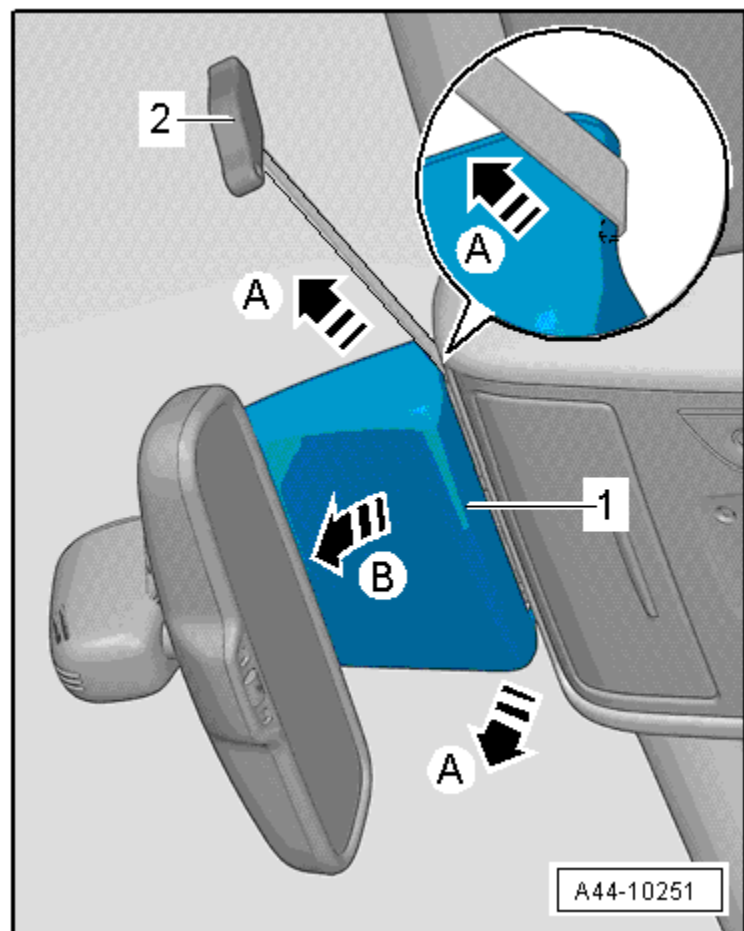


– Press retaining tabs -2- and -4- upwards.




**Note**

Carefully push the retaining tabs upwards only until it is possible to guide the camera control unit -J852- past them.

Pull camera control unit -J852--1- out of mountings -arrows- on retaining plate -5- towards rear in direction of -arrow 3-, keeping it parallel with retaining plate -5-

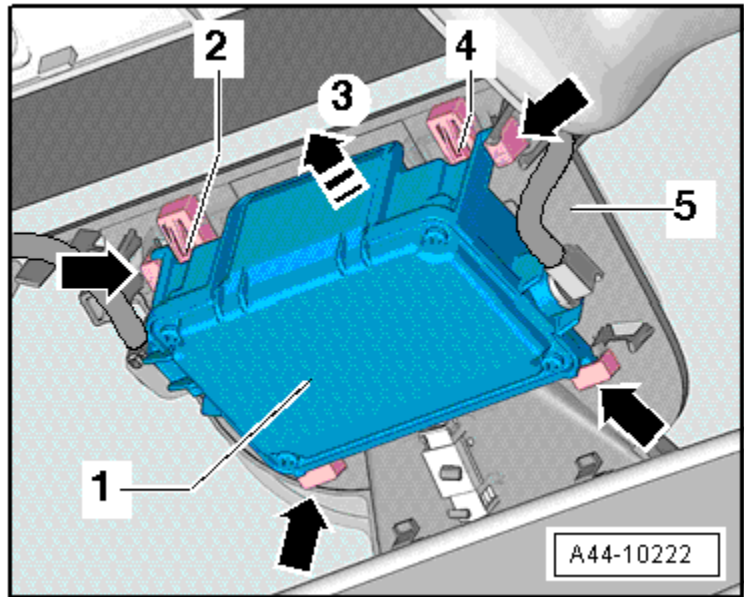

Unplug electrical connectors -2- and -3- and remove camera control unit -J852--1-

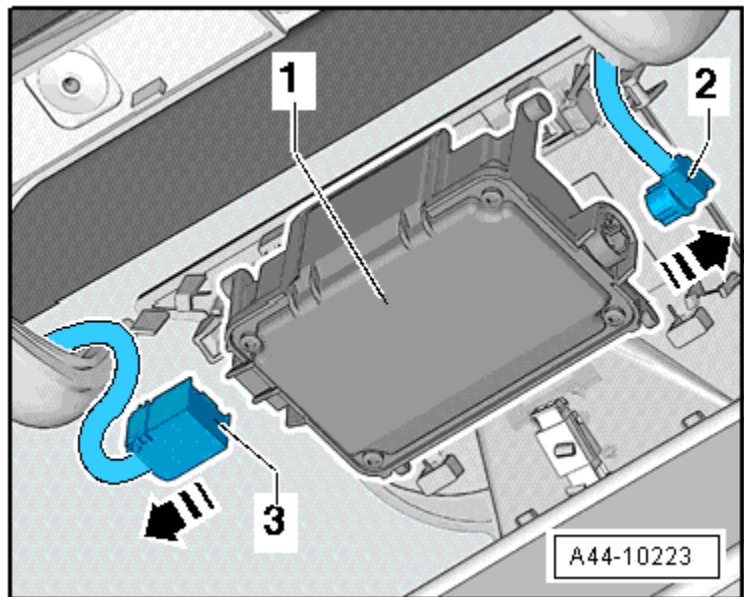

**Removing backlight masking screen**

Press clips together in direction of -arrows- and pull backlight masking screen out of bracket towards front.

**Installing**

Install in reverse order. Please note the following:



**Note**

The camera's area of vision on the inside of the windscreen must not be obstructed by condensation or dirt.

Clean the camera's area of vision on the - windscreen with cleaning fluid -D 009

401 04-

- Calibrate front camera for driver assist systems → [Running gear, axles, steering; Rep. gr.44.](#)

