



Dip Switch Setting for A1

 CAR MODEL SELECTION EXAMPLE




AUDI A1 2011 - Current






1. Use Remover Key to Pull out headunit

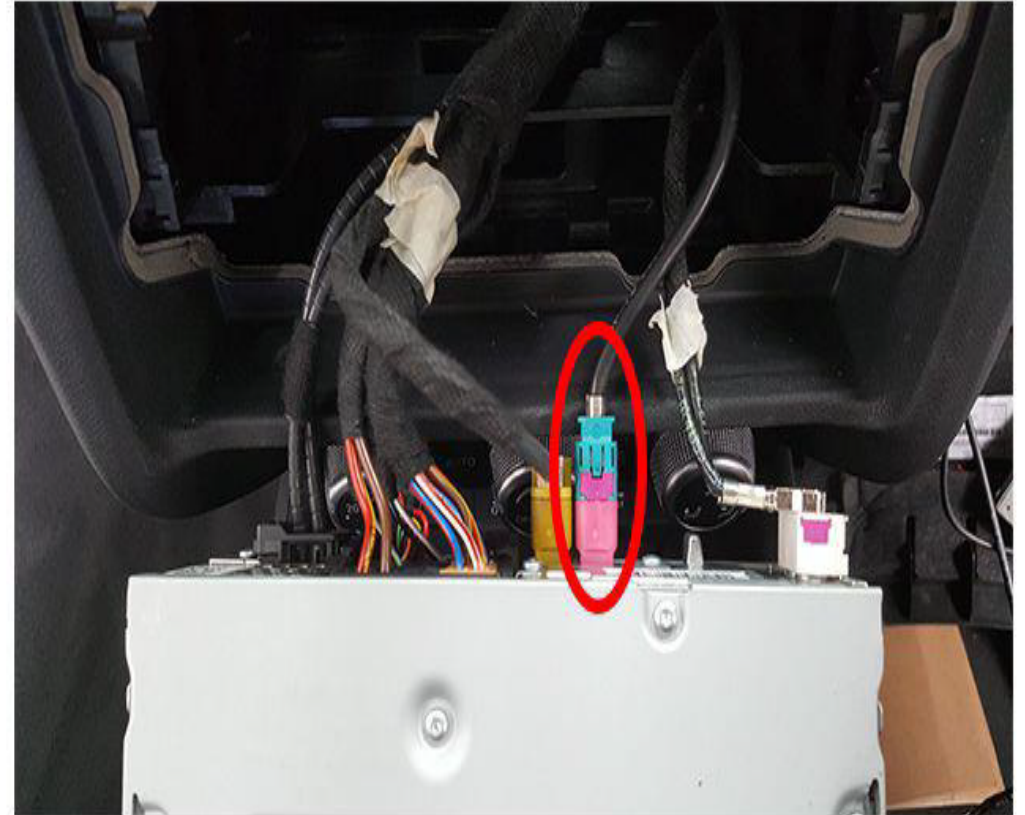

2. All you need to disconnect is PINK connector and connect provided Green video connector



AUDI 3G MMI / A1 - DASH REMOVAL - #1

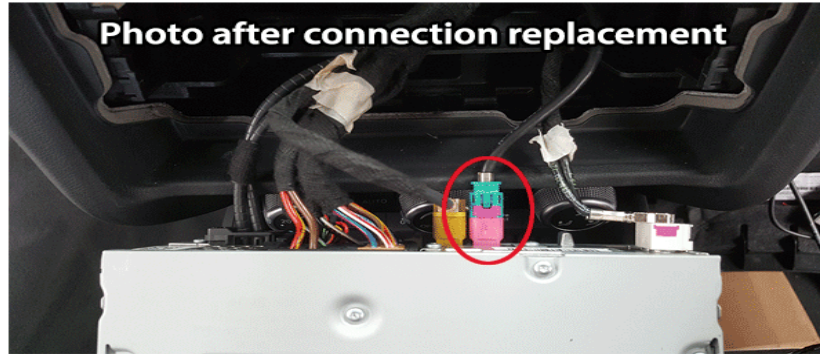

7. All you need to disconnect is **Pink** connector. And connect provided **GREEN** video connector from N20A Interface.



8. Remove the marked trim part - it held by clips.




9. The Pink connector from No.7, has to be brought out towards the opened trim area, from No.8


AUDI 3G MMI / A1 - DASH REMOVAL - #1



From No.9 - after trim removed, locate the CAN Gate connector.

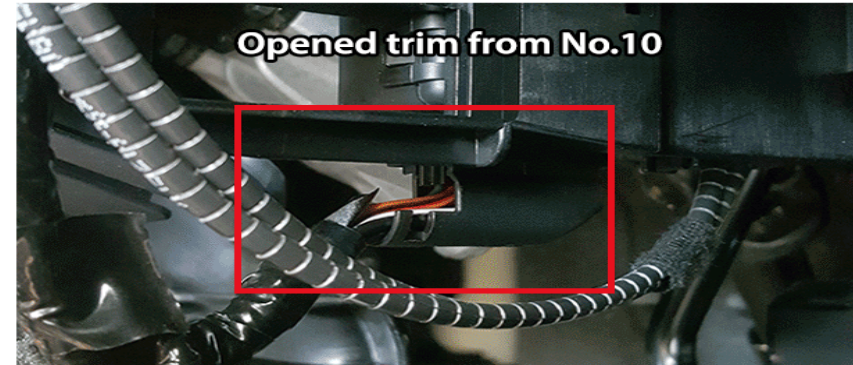


11. The marked harness is the CAN Gate plug. Disconnect it with care.

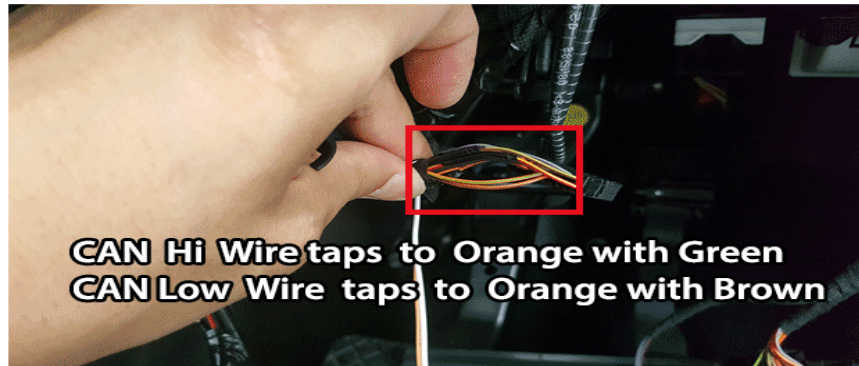

12. From the main connector of FP20A Interface, Connect CAN HI / CAN-LOW Wires. Then Reconnect it to the CAN GATE PLUG.

Once CAN wiring is finished, reassemble the trim.

CAMERA WIRING

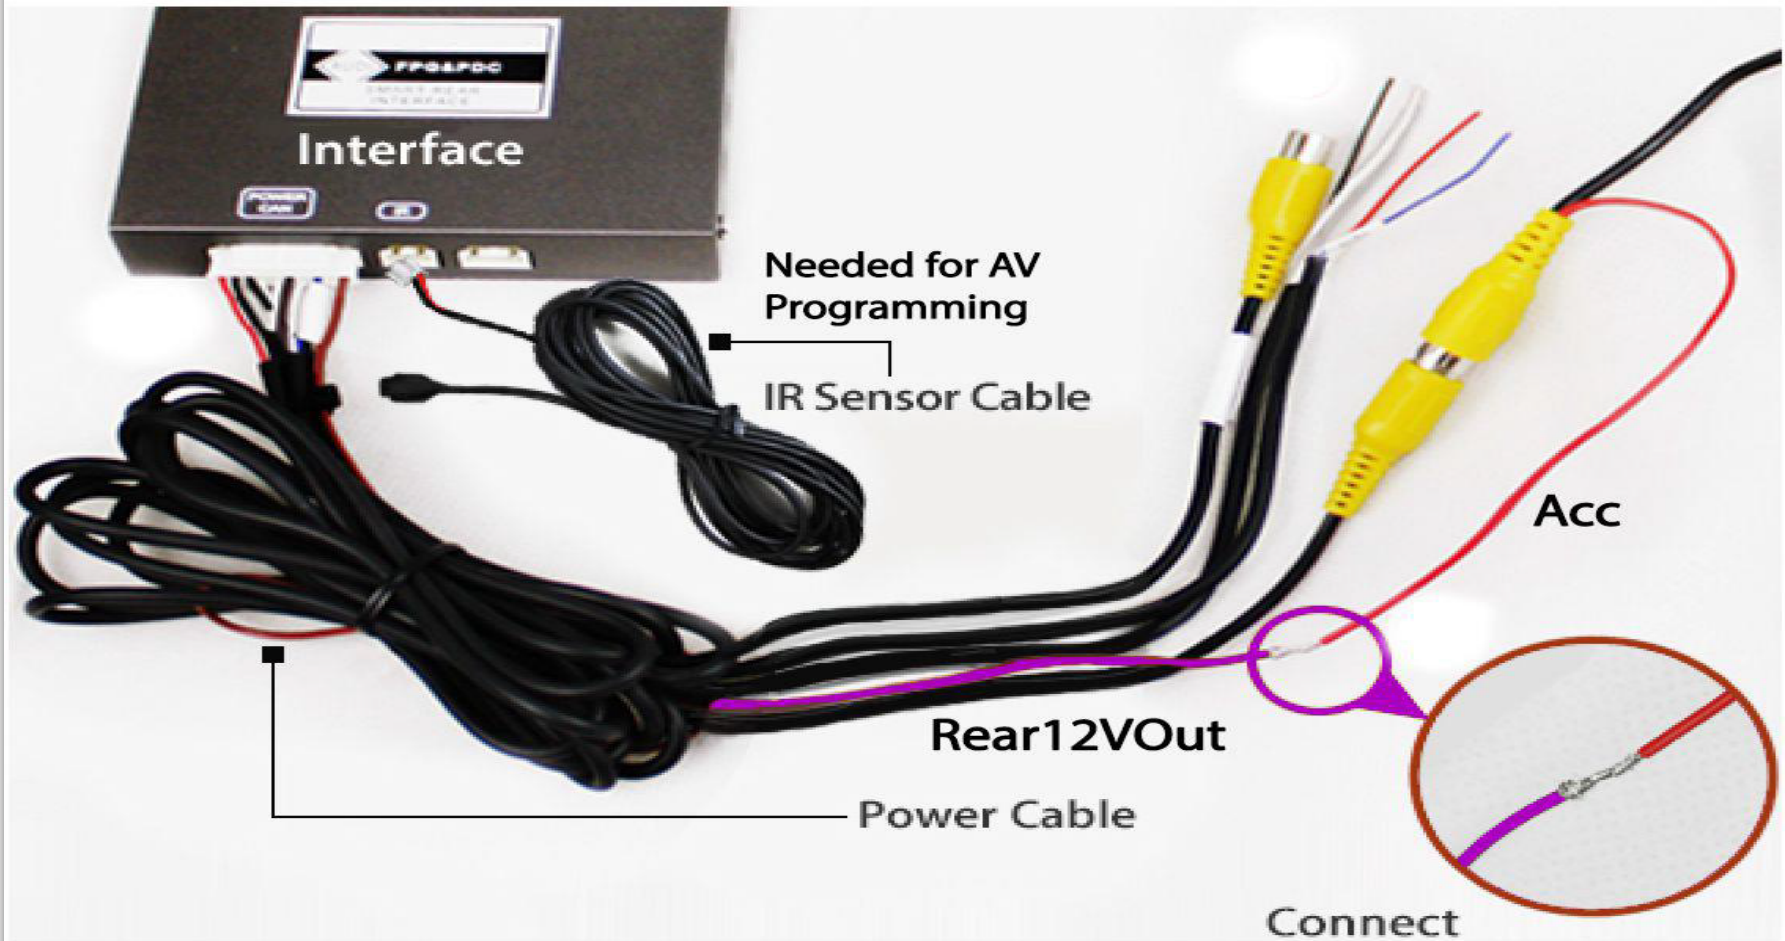

Tap **Purple**
'Rear12VOut' from
FP20A's main loom.

to Camera's
Red ACC wire
stuck out by itself.

While RCA connects
to 'CAMERA' port
from FP20A Main loom



Optional Remote Control Setting




While in reverse mode:


1. Number '1' will show up on top left corner once **press OK button** on remote controller.
2. **Press OK Button 4 more times** and will see Number '4' on top left corner.
3. **Press POWER Button** on remote to enter the setting screen.
(* The car must be on reverse mode.)
4. Keep go down by pressing ▼ button till find **'Warning language** menu. then press ► on remote to enter **language setting**.
5. Once all the settings are done, pres **'POWER'** button again to save & exit.



Number of inputs will be displayed on top left corner

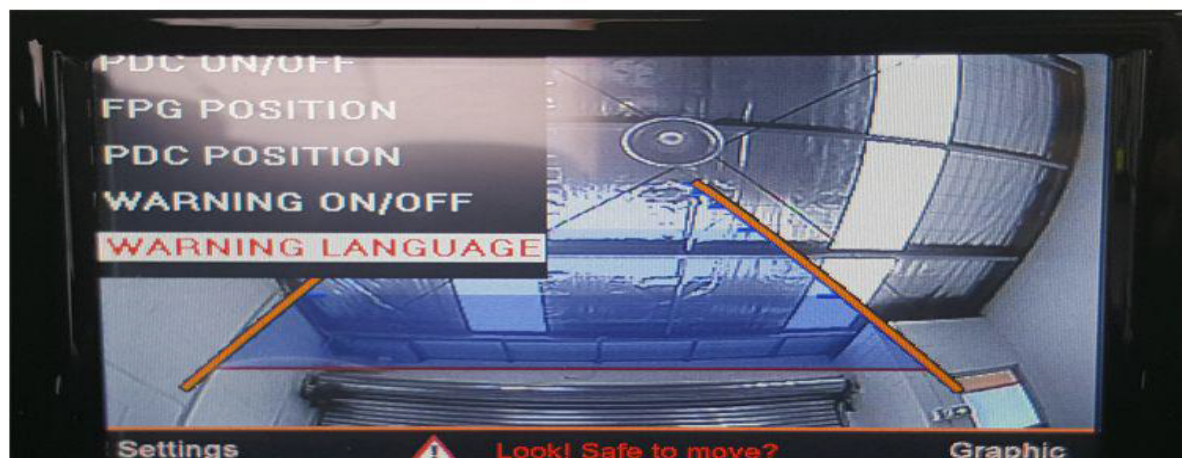

Pressing Power button on remote will bring up the menu screen.



Move to Warning / Language tab.

Then Select ENGLISH



Move to PDC ON /OFF tab

Then turn the PDC Off.

Due to Audi A1 does not have Optical Parking Display - Not needed.