

※ COMPATIBLE VEHICLE : 2008~A6, 2009~A4,S4,A5,S5,A8,Q5,Q7
2010~A7, 2011~A1,A6,Q3

1. HOW TO SET S/W MODE [(ON) 0 : ↓ off / (OFF) 1 : ↑ off]

off ON 1 2 3 4 5 6
on
DIP_SW1 : X
DIP_SW2, 3, 4 : VEHICLE SELECTION
DIP_SW5 : MONITOR RESOLUTION 800 Off / 480 On
DIP_SW6 : On

off ON 1 2 3 4 5 6	A4, Q5 2010, 2012, 2013, 2014	off ON 1 2 3 4 5 6	Q3(2013)	off ON 1 2 3 4 5 6	Q5, Q7
off ON 1 2 3 4 5 6	A4 2011, A6, A7, A8 2011~	off ON 1 2 3 4 5 6	Q7	off ON 1 2 3 4 5 6	Q3
off ON 1 2 3 4 5 6	A4, Q5 2010, 2012, 2013, 2014	off ON 1 2 3 4 5 6	Q7	off ON 1 2 3 4 5 6	Q3
off ON 1 2 3 4 5 6	A4 2011, A6, A7, A8 2011~	off ON 1 2 3 4 5 6	Q7	off ON 1 2 3 4 5 6	Q3

★ PDC FUNCTION WILL NOT OPERATE ON VEHICLES WITHOUT P BUTTON




1) CONNECT ORIGINAL CABLE TO AUDI INTERFACE BODY [VIDEO OUT] SOCKET.




2) CONNECT GIVEN LVDS CABLE TO BOTH AUDI ORIGINAL SOCKET AND AUDI INTERFACE BODY [VIDEO IN] SOCKET.

VEHICLE : A4, A5, A6, A7, A8, Q5

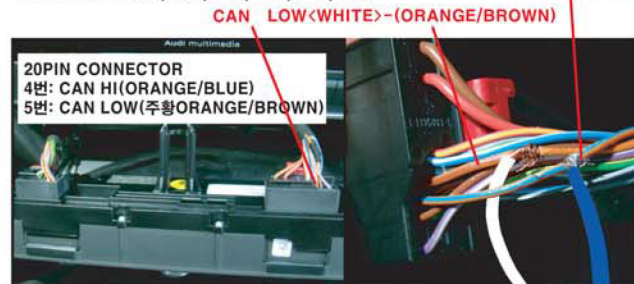

VEHICLE : Q3, Q5, Q7(UNDER THE PASSENGER SEAT DRAWER)

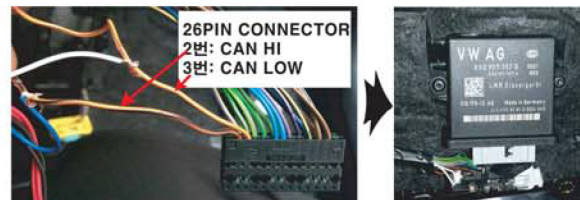

[COMPONENTS]



2. FRONT CAMERA SETTING(SETTING FROM REAR VIEW SCREEN)




– VEHICLE : A4, A5, A6, A7, A8
SET ON IN IR MENU WHEN USING FRONT CAMERA SCREEN SWITCH BY PRESSING 'I NAV' BUTTON ON STEERING WHEEL LONG TIME

– VEHICLE : Q3, Q5, Q7
SET ON IN IR MENU WHEN USING FRONT CAMERA SCREEN SWITCH BY PRESSING PDC BUTTON

– FRONT CAMERA SCREEN SHOWS UP AND SOON DISAPPEAR WHEN MOVE BY GEAR[R → P,D,N]ORDER. TIME SETTING CAN BE ADJUSTED IN IR MENU (5,7,9,11SEC.)

3. FRONT CAMERA AND REAR CAMERA SETTING

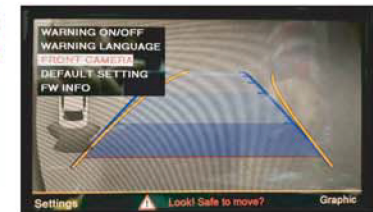

PRESS OK BUTTON ON R/C, NO. 1 WILL APPEAR AT LEFT UPPER PART OF THE SCREEN, THEN NO.4 WILL APPEAR ON THE SCREEN.
PRESS 1 BUTTON FOR THE ENTERANCE SCREEN.

[FPC & PDC INSTALLED VIEW]



< POWER CABLE PIN SPECIFICATION >

